

1

Switch on the processor




Does the LED flash ☀️ ... ☀️ Then 🔴 🔴 🔴

Change Battery

NO X

YES ✓

2

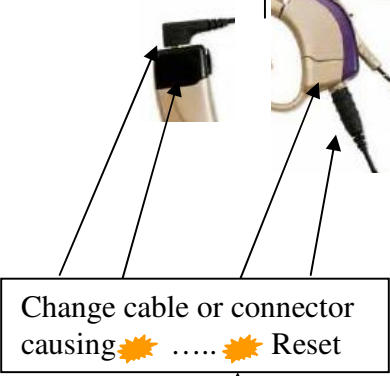

Change cable or connector causing ☀️ ☀️ Reset

Wiggle cable and connectors.
 Does the LED flash ☀️ ☀️ Then 🔴 🔴 🔴

YES ✓

NO X

3

Put coil on head →

Does LED flash to sound:
 BAA-BAA-BAA = 🌿 🌿 🌿

NO X

Change coil

YES ✓

Processor is functioning correctly ✓

